
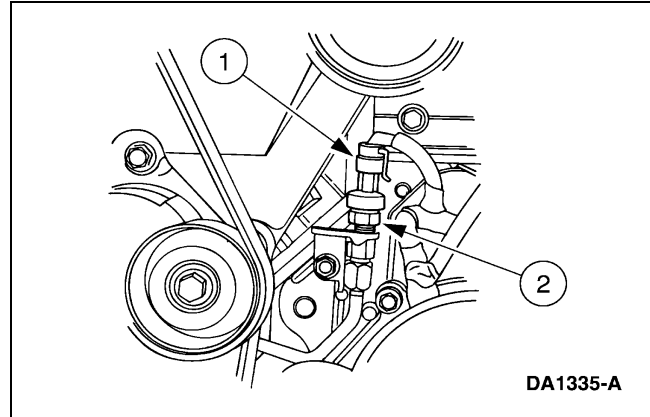


REMOVAL AND INSTALLATION

Exhaust Back Pressure Sensor

Removal

1.  **CAUTION:** Make sure the ignition switch is in the OFF position prior to working on the electronic engine controls.
Turn the ignition switch to the OFF position.
2. **NOTE:** The fan and fan clutch are removed for clarity.
Remove the exhaust back pressure sensor.
 - 1 Disconnect the electrical connector.
 - 2 Loosen and remove the sensor from the mounting bracket.



Installation

1. Follow the removal procedure in reverse order.