

REMOVAL AND INSTALLATION


Exhaust Back Pressure Solenoid

Removal

1. Remove the turbocharger compressor manifold; for additional information, refer to Section 303-04D.
2. **NOTE:** The turbocharger is removed for clarity only.

Remove the exhaust back pressure solenoid.

- 1 Disconnect the electrical connector.
- 2 Remove the bolt and the retaining bracket.
- 3 Remove the exhaust back pressure solenoid.

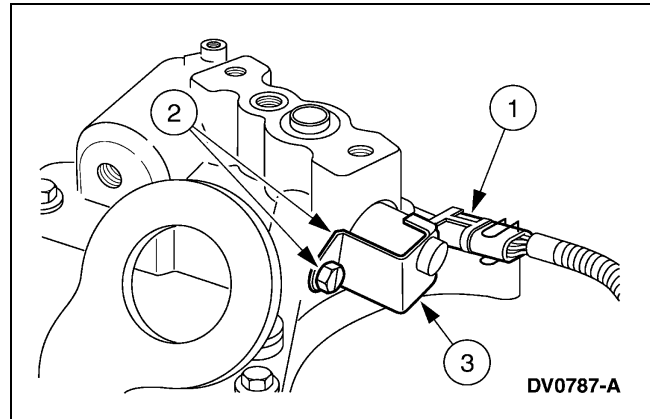

Installation

1. Follow the removal procedure in reverse order.
 - Lubricate the O-ring seals with clean engine oil prior to installing the exhaust back pressure solenoid.