 



REMOVAL AND INSTALLATION

Engine Coolant Temperature (ECT) Sensor

Removal

1.  **CAUTION: Make sure the ignition switch is in the OFF position prior to working on the electronic engine controls.**
Turn the ignition switch to the OFF position.
2. Partially drain the cooling system; for additional information, refer to Section 303-03.
3. Disconnect the electrical connector. Remove the water temperature indicator sender unit from the engine front cover.

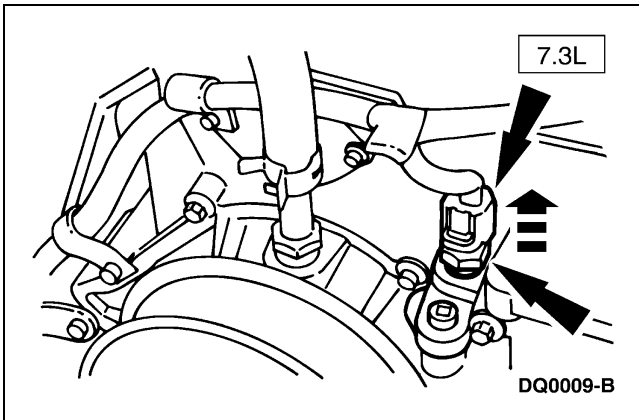

Installation

1. Follow the removal procedure in reverse order.

