
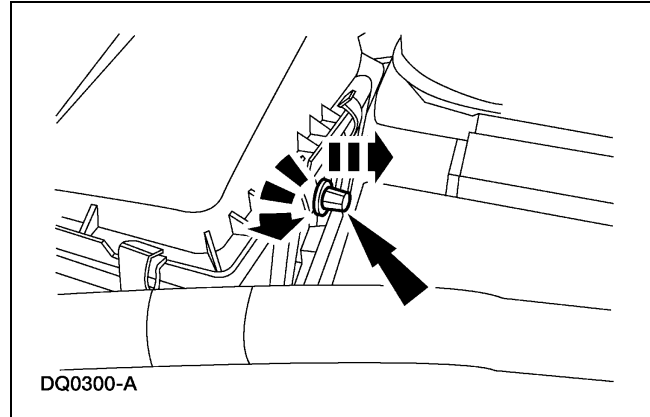
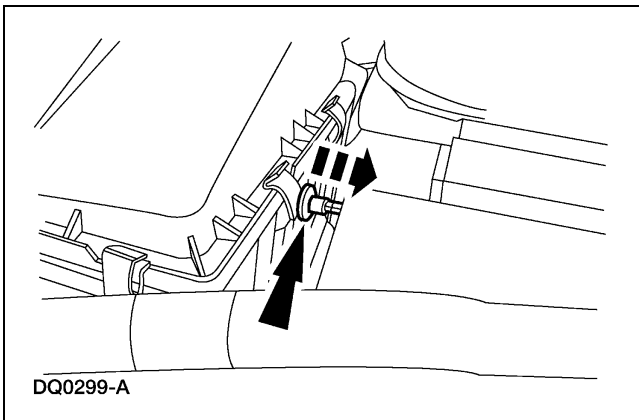


## REMOVAL AND INSTALLATION

### Intake Air Temperature (IAT) Sensor

#### Removal

1.  **CAUTION:** Make sure the ignition switch is in the OFF position prior to working on the electronic engine controls.  
Turn the ignition switch to the OFF position.
2. Disconnect the electrical connector from the intake air temperature sensor (IAT sensor) (12A697).



#### Installation

1. Follow the removal procedure in reverse order.
3. Rotate the intake air temperature sensor 1/4 turn counterclockwise and pull outward.