
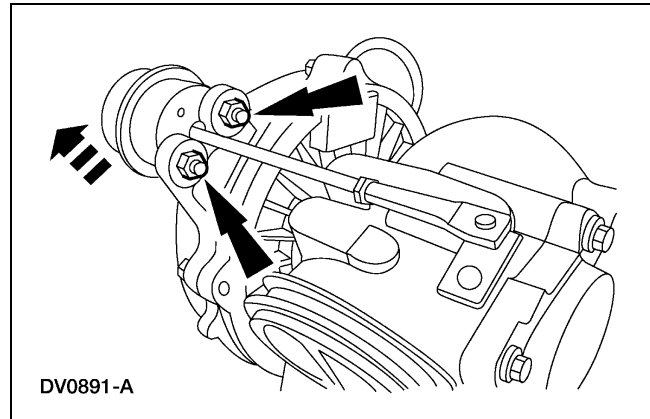


## REMOVAL AND INSTALLATION

### Wastegate Control Solenoid

#### Removal

1. Remove the turbocharger; for additional information, refer to Section 303-04D.
2. Disconnect the adjustment rod from the wastegate crank.
  - 1 Remove the clip.
  - 2 Remove the adjustment rod.

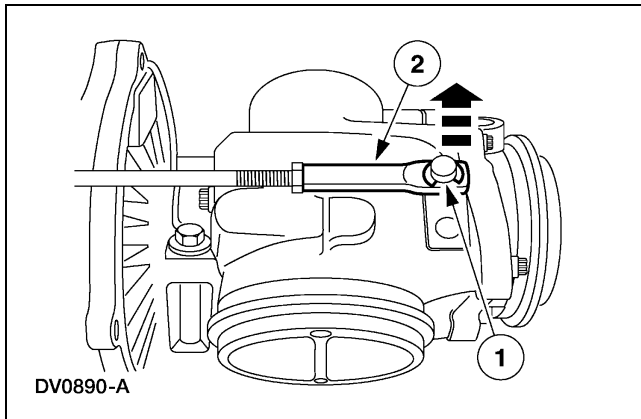

#### Installation

1. Follow the removal procedure in reverse order.

3. Remove the two lock nuts and the wastegate control solenoid.